

MAXI MASK 2000 HALF MASK RESPIRATOR

PRODUCT CODE: HMTPM | HMTSMS



FEATURES AND BENEFITS

Soft & durable Silicone for an airtight & secure seal (HMTSMS only)

Retroreflective tape for improved wearer visibility

Enhanced bolstered four point cradle suspension for improved load bearing & better fit & comfort

Low profile angle filter design for minimum visual impairment

Durable thermoplastic rubber mask for superior fit to most face shapes (HMTPM only)

Contour moulded nose for fit with glasses & goggles

Low resistance exhalation valve - to reduce heat & moisture build up

Able to be worn under most welding helmets

Co-moulded cartridge dock for easy on/off cartridge connection

Bayonet Connection for easy & secure filter connection

Twin filter design provides a more balanced fit, lower breathing resistance & improves field of vision



APPLICATIONS

Mining, Construction, Rigging, Agriculture, Painting, Chemical/Lab Work

PRODUCT DETAILS

Mask Body (HMTPM)	:	TPE (Thermoplastic Elastomer)
Mask Body (HMTSMS)	:	Silicone
Harness	:	4 Point Connection
Filter Connection	:	Bayonet
Weight	:	85gms
Size	:	M/L
Qty/Carton	:	20

WARNINGS AND USE LIMITATIONS

Always ensure the complete product is:

Suitable for the application

Fitted correctly

Worn during all periods of exposure

Replaced when necessary

Improper use of this respirator may result in personal injury or death. Improper use includes, but is not limited to; use without adequate training, disregard of the warnings and instructions, and failure to inspect and maintain the respirator. This respirator is not intended to be used in atmospheres which are, or may become, immediately dangerous to life & health (IDLH) or in atmospheres where the identity and/or concentration of the contaminants are unknown.

STANDARDS

AS/NZS1716: 2012 Respiratory Protective Devices

To be used in conjunction with:

AS/NZS1715:2009 Selection Use and Maintenance of Respiratory Protective Equipment



PRODUCT CODE: HMTPM (TPE), HMTSMS (Silicone)

WA

T (618) 9301 7888
F (618) 9310 7889
E wa@paramountsafety.com.au

MELBOURNE

T (613) 9764 9900
F (613) 9764 9800
E vic@paramountsafety.com.au

SYDNEY

T (612) 9601 3877
F (612) 9601 3899
E nsw@paramountsafety.com.au

BRISBANE

T (617) 3806 2699
F (617) 3806 3266
E qld@paramountsafety.com.au

ADELAIDE

M 0424 504 802
T (613) 9764 9900
F (613) 9764 9800
E sa@paramountsafety.com.au

NEW ZEALAND

T (649) 525 8090
F (649) 523 9773
E nz@paramountsafety.co.nz

ACCESSORIES

PRODUCT CODE: PCP2 | PCA1P2 | PCABEK1 | PCFP2 | PCRC



▶ PCP2 CARTRIDGES

P2 Cartridges protect against mechanical & thermally generated particles

Easy 'Lock-On System' to ProChoice Maxi Mask 2000

Comes complete with P2 ProChoice Filter & Retainer Caps

Qty/Box: 1 pair

Qty/Carton: 50 pairs



PRODUCT CODE: PCP2

▶ A1P2 CARTRIDGES

A1P2 Cartridges for gas/vapour & combination particulate/gas/vapour cartridge

Combination cartridge protects against mechanically & thermally generated particles & organic vapours & gases

Easy 'Lock-On System' to ProChoice Maxi Mask 2000

Comes complete with P2 ProChoice Filter & Retainer Caps

Qty/Box: 1 pair

Qty/Carton: 25 pairs



PRODUCT CODE: PCA1P2

▶ ABEK1 CARTRIDGES

Low profile design for complete vision
Protects against a wide range of chemicals including organic & synthetic vapour, acid gas, sulphur & ammonia

Can be fitted with the P2 ProChoice Filter Pads to provide extra protection from dust/mist particles

Easy 'Lock-On System' to ProChoice Maxi Mask 2000

Qty/Box: 1 pair

Qty/Carton: 25 pairs



PRODUCT CODE: PCABEK1

▶ PROFILTER P2 PREFILTER

For use with ProCartridges

P2 PreFilter products protects against mechanical & thermally generated particles

Lightweight pads fit inside ProCartridge gas cartridge easy replacement system

Qty/Box: 20

Qty/Carton: 50 boxes



PRODUCT CODE: PCFP2

▶ PREFILTER RETAINER CAPS

For use with ProFilter & ProCartridges

Qty/Box: 1 pair

Qty/Carton: 200 pairs



PRODUCT CODE: PCRC

▶ PRESS TO CHECK P3 CARTRIDGES

Press To Check filters are a revolutionary filter cartridge system that allows you to self-assess the seal of your mask

They are a personal fit test system that can be administered anytime & anywhere

Qty/Box: 1 pair

Qty/Carton: 25



PRODUCT CODE: PTPC3

▶ FITTING INSTRUCTIONS



Ensure the elastic is not twisted and that it is secured to all mounting positions, on the valve cage, rear clips and head cradle. Adjust rear clips to fit approximately. Adjust head cradle to fit top of head.



Place head cradle onto top of head, over crown area.



Position mask onto face and clip rear clips together behind neck. Ensure mask sits securely on face.




Adjust head cradle and rear clip elastic lengths until fit is comfortable and secure. Chin should fit comfortably into bottom of the respirator. To check efficiency place a piece of card in front of the filters, inhale, and respirator should contract sharply.

▶ FITTING ASSEMBLY INSTRUCTIONS



Start assembling the filter.

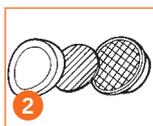

Attach the cover and shell base with filter contained within.



Attach the assembled filters to Half Mask body by lining up the arrows on the Cartridges to the arrows on the body and twisting until it locks into position



Put on the harness as instructed above.

WA

T (618) 9301 7888
F (618) 9310 7889
E wa@paramountsafety.com.au

MELBOURNE

T (613) 9764 9900
F (613) 9764 9800
E vic@paramountsafety.com.au

SYDNEY

T (612) 9601 3877
F (612) 9601 3899
E nsw@paramountsafety.com.au

BRISBANE

T (617) 3806 2699
F (617) 3806 3266
E qld@paramountsafety.com.au

ADELAIDE

M 0424 504 802
T (613) 9764 9900
F (613) 9764 9800
E sa@paramountsafety.com.au

NEW ZEALAND

T (649) 525 8090
F (649) 523 9773
E nz@paramountsafety.co.nz